

AL-007 9LEDs Music Light

User's Manual

Dear Customer:

Thank you for choosing AL-007 9LEDs music light. Please read the user's manual carefully before using this product, and operate the product according to the manual. Please keep this manual for later reference.

⚠ CAUTION

- ◇ Do not open the casing for any reason as this may cause short circuit or malfunction of the product.
- ◇ Do not apply excessive force to the products. In the event of the product suffering breakage, be careful not to damage yourself with the broken pieces.
- ◇ Do not put in any liquid nor foreign object.
- ◇ Keep unit away from dust, extreme temperatures and humidity.
- ◇ When the unit is not in use for a long period of time, remove the battery to prevent leakage.

■ Panel and Functions

Nine light LEDs illuminate up to four pages of sheet music

Integrated fin keeps light form distracting audience

flexible gooseneck allows for precise light adjustment

Padded clip provides stable attachment to music stand

AC Adaptor jack


Powered by AC adaptor or 3x AA batteries

Easy access power switch controls 2 brightness levels

■ Battery replacement

When the battery nears its end, the LED light becomes dim, weak. Replace the battery immediately. Or use the light with the AC adaptor.

1. Open the battery cover and insert the batteries so the positive end(+) and the negative end(-) align as illustrated in the battery compartment diagram.
2. The negative end(-) is always aligned with a spring mechanism.
3. Batteries will have alternating alignment - 2 batteries in one direction, and 1 battery in the opposite direction as shown on the back of the light.

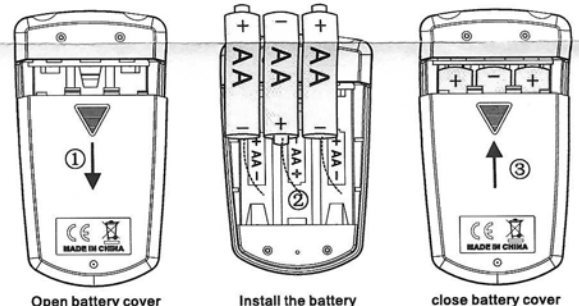

4. Do not mix battery brand. (all three batteries must be the same brand)
5. Do not mix alkaline standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
6. Do not attempt to recharge non-rechargeable batteries.

■ Specifications

1. Nine light emitting diodes (LEDs) illuminate up to four pages of sheet music
2. Rugged, solid state lighting technology lasts up to 100,000 hours
3. 24 hours of battery life for continuous using on the low setting or 16 hours on the high setting
4. Easy access power switch on bottom controls two brightness levels
5. Strong and flexible gooseneck arm that moves in as many directions as needed
6. Sturdy clip attaches to music stand or sits freestanding
7. Shade on back of lamp head directs more light on music and reduces glare towards audience
8. Power supply by 3x AA batteries or AC adaptor (INPUT: AC 100-240V, 50/60Hz; OUTPUT: 5V, 0.5A)
9. A travel case (included)
10. Product weight: Approx. 215g